

Data	Description
atz	Reset AT Command settings
OK	Command process OK
at+prip=10.8.0.70	Setting the remote IP address to connect
OK	Command process OK
at+prp=1470	Setting the remote port number to Connect
OK	Command process OK
atd	Connecting to the remote host
CONNECT	TCP connection success This is on-line state.
	Send "+++"
OK	Command process OK This is command state.
at+prip?	Get the remote IP address.
10.8.0.70	Response
OK	Command process OK
ato	Go back On-line state from Command state
CONNECT	This is on-line state.