

4-Port Analog Input I/O Gateway

SIG-5530 User Manual

Version 1.1

Sollae Systems

<https://www.ezTCP.com>



This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, household waste disposal service or the retail store where you purchased this product.

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents

1 Overview	4 -
1.1 Introduction	4 -
1.2 Features	4 -
1.3 Specification	5 -
1.4 Interface	6 -
1.4.1 Power	6 -
1.4.2 Ethernet	7 -
1.4.3 Analog Input Port	7 -
1.4.4 LED	8 -
1.4.5 Function Button	8 -
1.4.6 Setup Port	8 -
2 Preparation	9 -
2.1 Installing the Setting Tool	9 -
2.2 Connecting a Product	9 -
2.3 Searching Devices	9 -
2.4 Logging in	9 -
3 Settings	10 -
3.1 Network	10 -
3.1.1 Obtain an IP address automatically.....	10 -
3.1.2 Use a Static IP address.....	11 -
3.2 General	12 -
3.2.1 Comments	12 -
3.2.2 TCP	12 -
3.2.3 Modbus	13 -
3.2.4 Analog Input	13 -
3.3 Security	14 -
3.3.1 Password	14 -
3.3.2 Certificate	14 -
3.3.3 spFinder	14 -
3.3.4 Client ID	15 -
4 Management	16 -
4.1 Checking Status	16 -
4.1.1 Product Information	16 -
4.1.2 Communication Status	17 -
4.1.3 Timeout	18 -
4.1.4 Copy Status	18 -
4.2 Firmware Change	19 -
4.2.1 Online Upgrade	19 -
4.2.2 Manual Upgrade	20 -

- 4.3 Console - 21 -
 - 4.3.1 Output Tab - 21 -
 - 4.3.2 FW Log Tab - 22 -
 - 4.3.3 Timeout - 22 -
- 4.4 Export/Import Setting Values - 23 -
- 4.5 Reboot a Product - 24 -
- 4.6 Factory Reset - 25 -
- 5 Register Map - 26 -**
 - 5.1 Read Only - 26 -
 - 5.1.1 Analog Input Value Register..... - 26 -
 - 5.1.2 Minimum Analog Input Value Register..... - 26 -
 - 5.1.3 Maximum Analog Input Value Register..... - 26 -
 - 5.1.4 Analog Input Value Register (FP32)..... - 27 -
 - 5.1.5 Minimum Analog Input Value Register (FP32)..... - 27 -
 - 5.1.6 Maximum Analog Input Value Register (FP32)..... - 27 -
 - 5.1.7 1-bit ADC Value Register..... - 28 -
 - 5.1.8 Device Information Register..... - 28 -
 - 5.2 Read / Write - 30 -
 - 5.2.1 Reset Analog Input Min/Max Value Register..... - 30 -
 - 5.2.2 Sending Basic Notification Enable Register..... - 30 -
 - 5.2.3 Sending Extended Notification Enable Register..... - 30 -
- 6 Technical Support and Warranty - 31 -**
 - 6.1 Technical Support - 31 -
 - 6.2 Warranty - 31 -
 - 6.2.1 Free Repair Services - 31 -
 - 6.2.2 Charged Repair Services..... - 31 -
- 7 Precaution and Exemption from Liability - 32 -**
 - 7.1 Precaution - 32 -
 - 7.2 Exemption from Liability - 33 -
 - 7.2.1 English version - 33 -
 - 7.2.2 French version - 34 -
- 8 Revision History - 36 -**

1 Overview

1.1 Introduction

SIG-5530 is an industrial I/O Gateway consisting of 4 analog input ports. Users can remotely monitor analog values of sensors connected to this product by using Modbus/TCP.

1.2 Features

- 4 analog input ports: voltage or current
- Support Modbus/TCP
- Support multiple TCP connection (Max. 4 channels)
- Support a 1-bit ADC function for the *Internet Switch*
- Industrial temperature range (-40°C ~ +85°C)

☞ *Internet Switch: A configuration that connects devices to each other without an HMI to transmit digital signals in both directions.*

1.3 Specification

Analog Input	
Input Type	Voltage (0V ~ 5V) or Current (4mA ~ 20mA / 0mA ~ 20mA)
Resolution	16 bits
Number of Ports	4 ports
Network Physical Interface	
Network Interface	10Base-T/100Base-TX Ethernet (RJ45) Ethernet Speed Auto Sense 1:1 or Cross-over Cable Auto Sense
Software Functions	
Protocols	IPv4/IPv6 Dual Stack, TCP/UDP, ICMP, DHCP, mDNS, Modbus/TCP, SSL/TLS
Indicators	
LED	MTX, MRX
Management	
spFinder	Configuration and Monitoring Tool
Security	Password
Dimension	
Size	94mm x 57mm x 24mm
Weight	about 65g
Operating Environment	
Input Voltage	DC5V \pm 0.2V
Protection	Reverse Voltage Protection / Surge Protection
Current Consumption	Typically, 264mA
Operating Temperature	-40 $^{\circ}$ C ~ +85 $^{\circ}$ C
Storage Temperature	-40 $^{\circ}$ C ~ +85 $^{\circ}$ C
Certificate	
KC	Registration (KN 32, KN 35)
CE	EMC 2014/30/EU, RoHS 2011/65/EU
FCC	FCC Part 15 Subpart B, Class A

Table 1-1 Specification

1.4 Interface

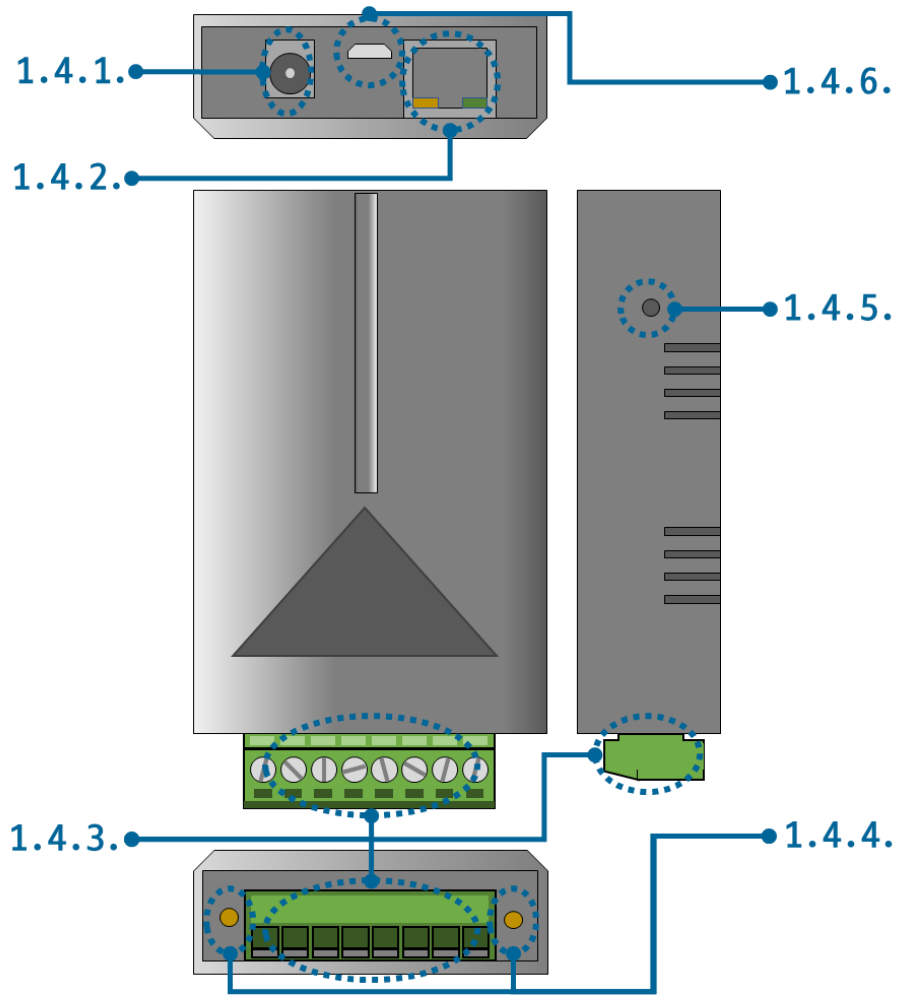


Figure 1-1 Interface

1.4.1 Power

SIG-5530 requires DC5V($\pm 0.2V$) power supply whose specification is as follows:

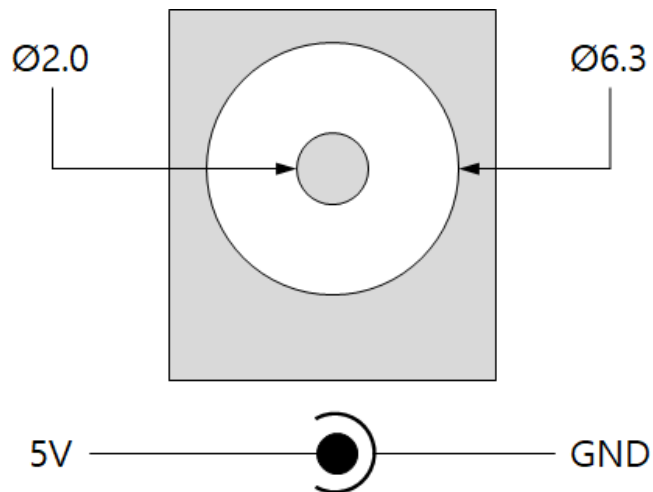


Figure 1-2 Power

1.4.2 Ethernet

SIG-5530 provides 10/100Mbps Ethernet. The pin assignment is as follows:

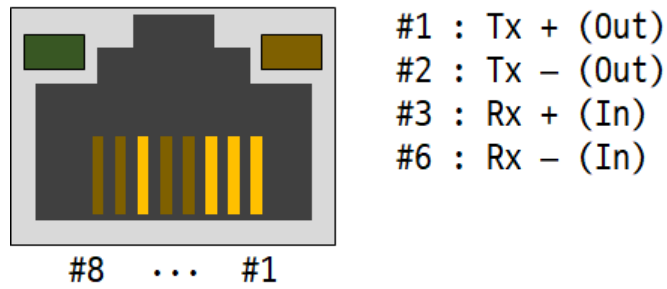


Figure 1-3 Ethernet

1.4.3 Analog Input Port

This port is interfaced with a 3.5mm pitch 8-pole terminal block.

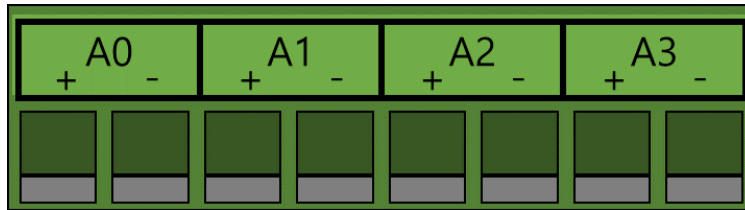


Figure 1-4 Analog Input Port

- Port Specification

Division	Value
Number of ports	4
Input mode	Voltage (0 ~ 5V) or Current (4 ~ 20mA / 0 ~ 20mA)
Resolution	16-bit (0 ~ 65,535)

Table 1-2 Port Specification

1.4.4 LED

SIG-5530 provides 4 LEDs.

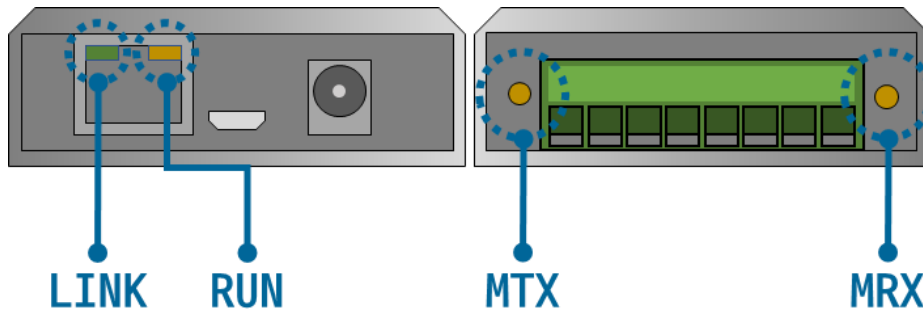


Figure 1-5 4 LEDs

LED operations according to each state are as follows:

When the script is running: RUN



When the script is running: RUN



When a network is not connected: LINK



When a network is connected: LINK



When a TCP connection is NOT established: MTX & MRX



When sending data to the TCP: MTX



When receiving data from the TCP: MRX



1.4.5 Function Button

This button is used to implement a factory reset.

1.4.6 Setup Port

This port is used for making a connection with a PC via USB cable.

2 Preparation

2.1 Installing the Setting Tool

You need a program which is called spFinder to use this product. Download the program on our web site and install it on your PC.

Functions of the spFinder are as follows:

- Searching products connected via network and USB
- Setting products
- Monitoring status of products

2.2 Connecting a Product

Connect a product with your PC via a LAN cable or a USB cable. In the case of using a LAN cable, note that your PC and the product should be on the same local area network.

2.3 Searching Devices

Run spFinder on your PC and press the search button. If you select the product found, the setup menu appears on the right.

2.4 Logging in

Before accessing the searched product, you need to log in first. The default ID and password are as follows:

Division	Default Values
ID	sig-5530
Password	sig-5530

Table 2-1 The default values of ID and password

☞ *If the product is connected via a LAN cable and the password is set to the default value, spFinder automatically handles the login process.*

3 Settings

3.1 Network

3.1.1 Obtain an IP address automatically

This product can automatically obtain an IP address by DHCP. A DHCP server is required to use this.

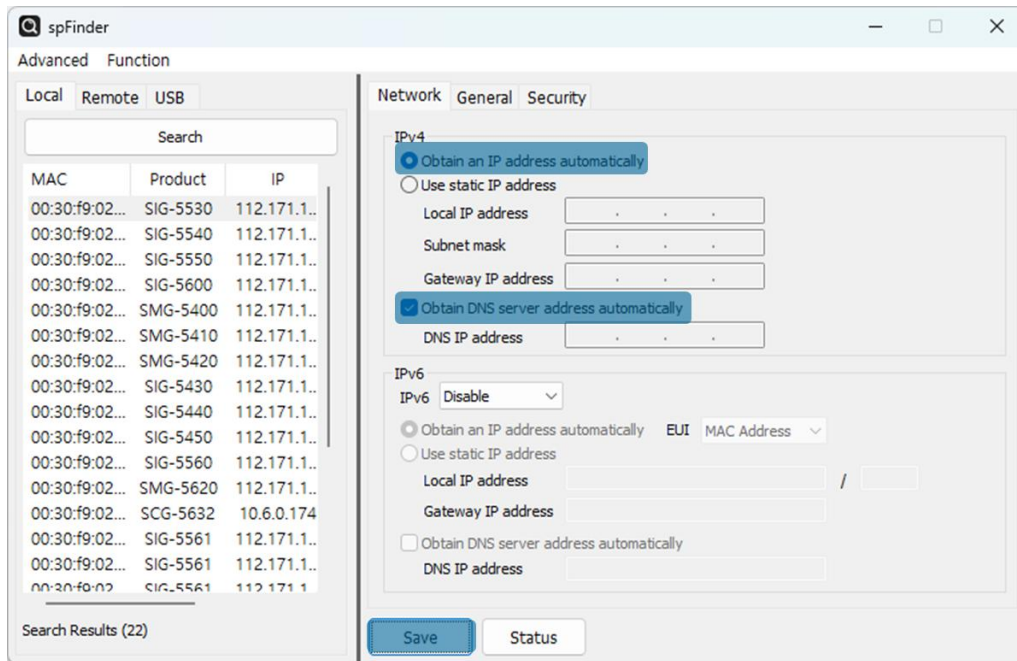


Figure 3-1 Obtain an IP address automatically

- Select the [Obtain an IP address automatically].
- Check the [Obtain DNS server address automatically] and click the [Save] button.

3.1.2 Use a Static IP address

You can set a static IP address to this product.

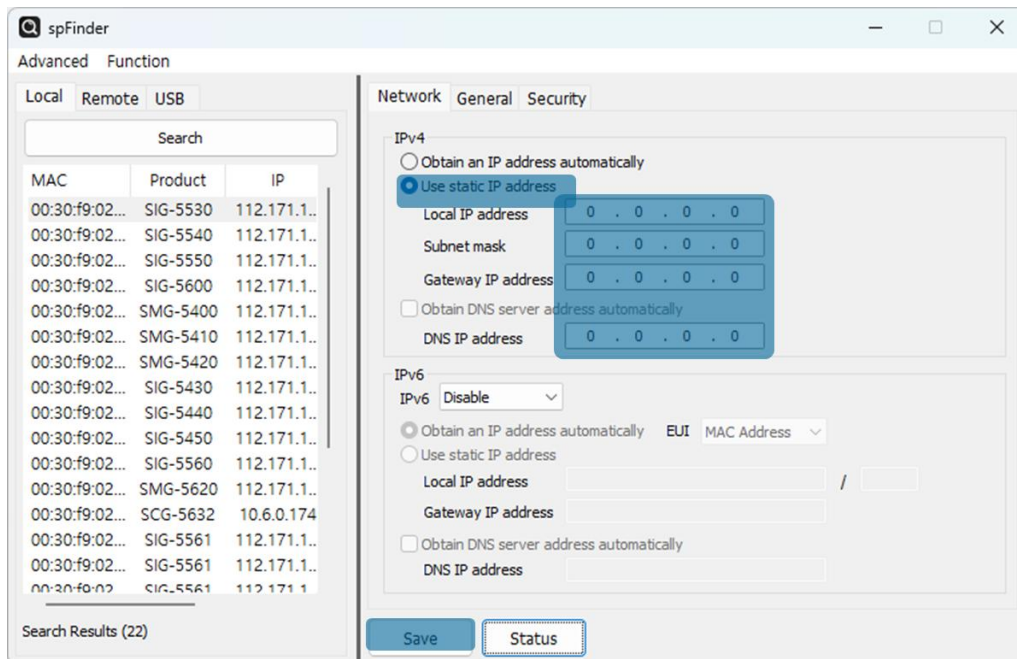


Figure 3-2 Use a static IP address

- Select the [Use static IP address].
- Set the [Local IP address], [Subnet mask], [Gateway IP address] and [DNS IP address].
- Click the [Save] button.

3.2 General

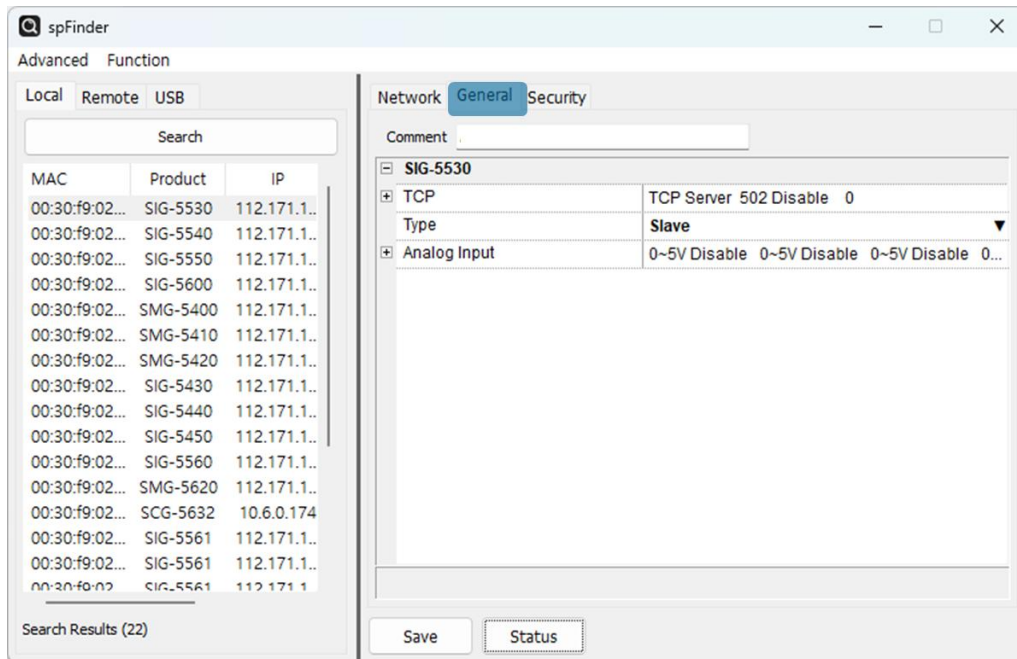


Figure 3-3 General

3.2.1 Comments

This setting is for storing the product description. The maximum setting size of this item is 32 bytes.

3.2.2 TCP

- Connection Mode

This item selects the TCP connection method. You can choose between TCP Server and TCP Client. The default is TCP Server.

- Peer Address

This item is to enter an IP address or a host name of the host to connect to. It is valid only when the Connection Mode is set to TCP Client.

- Port

This item is to set the port number for the TCP connection. It can be set between 0 and 65535. The default is 502.

- Multiple Connection

This item enables multiple TCP connections. When this item is set to Disable, only one TCP session (TCP0) can be used. If this item is set to Enable, the rest of TCP sessions (TCP1 to 3) are activated. It means you can use 4 sessions at the same time.

- Connection Timeout (Unit: sec)

This is the timeout setting for terminating a TCP connection. The device will close the TCP connection if no valid Modbus/TCP data communication occurs within the time specified in this field. The unit is second, and the value can be set between 0 and 3600. The default value is 0.

3.2.3 Modbus

- Type

This item is to set the Modbus type. This product allows the Slave only.

3.2.4 Analog Input

- Mode

This item selects the analog input type. The setting value can be selected among [0 ~ 5V], [4 ~ 20mA] and [0 ~ 20mA]. The default value is [0 ~ 5V].

- 1-bit ADC

This function converts analog input value into 1-bit digital value. This function is only used in Internet switch.

- High Reference

This is the reference value used to determine HIGH in the 1-bit ADC. Analog input values greater than this threshold are considered HIGH. The setting unit depends on the configured Mode, and values can be set up to five decimal places.

- Low Reference

This is the reference value used to determine LOW in the 1-bit ADC. Analog input values smaller than this threshold are considered LOW. The setting unit depends on the configured Mode, and values can be set up to five decimal places.

☞ *The initial value of the 1-bit ADC is LOW. If the analog input value is between the High Reference and Low Reference, the 1-bit ADC value remains unchanged.*

3.3 Security

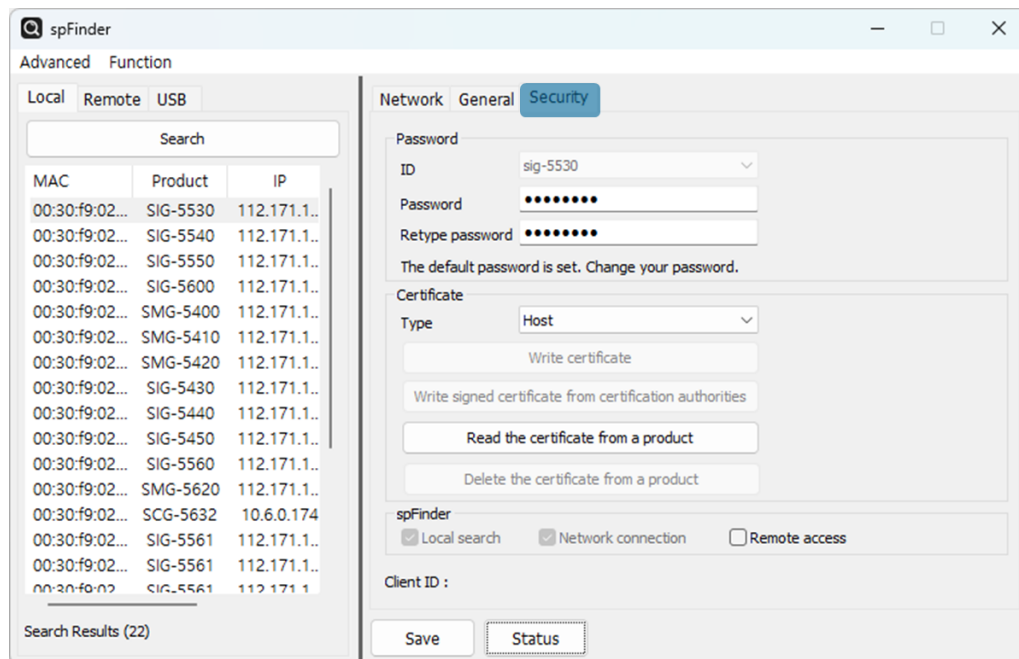


Figure 3-4 Security

3.3.1 Password

Both ID and password are required to access this product. Note that changing the default password to another is highly recommended for security. The password should be longer than 8 characters.

- Input a password to use to [Password] and [Confirm password].
- Click the [Save] button.

3.3.2 Certificate

This is not available for this product.

3.3.3 spFinder

These items are related to spFinder use.

- Local search

If this option is not checked, the device cannot be searched for or connected to on the local network. This setting can only be changed when the device is connected via USB.
- Network connection

If this option is not checked, the device cannot be searched for on the local network and cannot be connected from either the local or remote network. This setting can only be changed when the device is connected via USB.

- Remote access

If this item is checked, the product can be connected from the remote network. The port number of remote access for spFinder is TCP 57457. For security, this item is unchecked by default.

3.3.4 Client ID

This is NOT available for this product.

4 Management

4.1 Checking Status

This is a function to view the current status of the product. Information in the [Status] window is automatically updated every second. After searching and connecting the product with spFinder, press the [Status] button to display this window. When you open this window, the spFinder connects to the product and keeps the connection until you close the window or time out. While the connection is maintained, other hosts cannot access the product using the spFinder.

4.1.1 Product Information

- Product Information Window

This area shows some major information about your product.

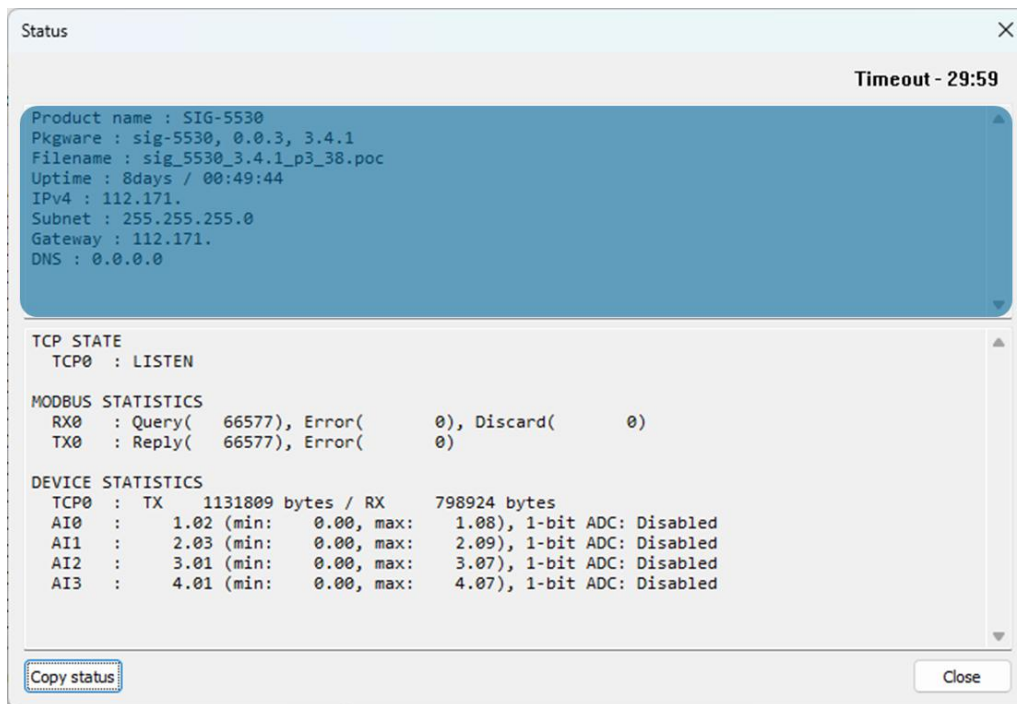


Figure 4-1 Product Information Window

- Product Information List

Item	Description
Product name	Product name
Pkgware	Model name, package version, Firmware version
File name	File name
Uptime	Elapsed time since it boots up (day / hour:min:sec)
IPv4	Assigned IPv4 address
Subnet	Assigned subnet mask
Gateway	Assigned gateway IP address
DNS	Assigned DNS server IP address

Table 4-1 Product Information List

4.1.2 Communication Status

- Communication Status Window

This area shows some communication status of your product. This area is refreshed every second.

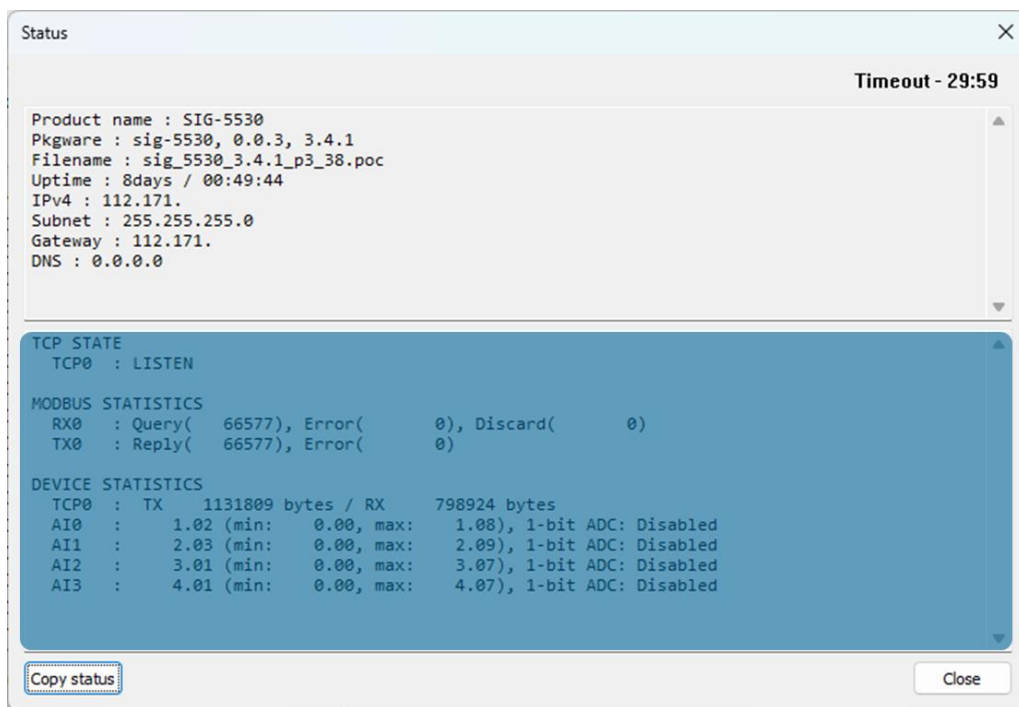


Figure 4-2 Communication Status Window

- TCP STATE

Status	Description
LISTEN	Listen
CLOSED	Disconnected
CONNECTED	Connected (IP and port of the connected host will be shown)
CONNECTING	Connecting
DISCONNECTING	Disconnecting

Table 4-2 TCP STATE

- MODBUS STATISTICS

Item	Description
RX0~3	Statistics of incoming data from TCP: Query, Error, Discard
TX0~3	Statistics of outgoing data to TCP: Reply, Error
Query	The number of query frames received by the master
Error	The number of invalid frames among sent/received frames
Discard	The number of frames discarded due to protocol mismatch
Reply	The number of response frames sent to the master

Table 4-3 MODBUS STATISTICS

- DEVICE STATISTICS

Item	Description
TCP0~3	The byte count of TCP data: TX, RX
TX	The byte count of outgoing TCP data
RX	The byte count of incoming TCP data
AI0~3	Current value (minimum value, maximum value) of each analog input port and 1-bit ADC value

Table 4-4 DEVICE STATISTICS

4.1.3 Timeout

This is the timeout display function that appears in the upper right of the status window. When this time reaches zero, the connection between spFinder and the product is lost. The initial value is 30 minutes. If you move the mouse pointer in the internal area of the status window, the timer is reset to the initial value again.

4.1.4 Copy Status

Clicking the button copies all information displayed in the current status window to the clipboard.

4.2 Firmware Change

New firmware can be released when adding functions or fixing bugs. If you are using old firmware, you can upgrade it to the latest version. Firmware can be upgraded online or manually via spFinder.

4.2.1 Online Upgrade

If you can access the Internet by your PC, the Firmware can be upgraded online.

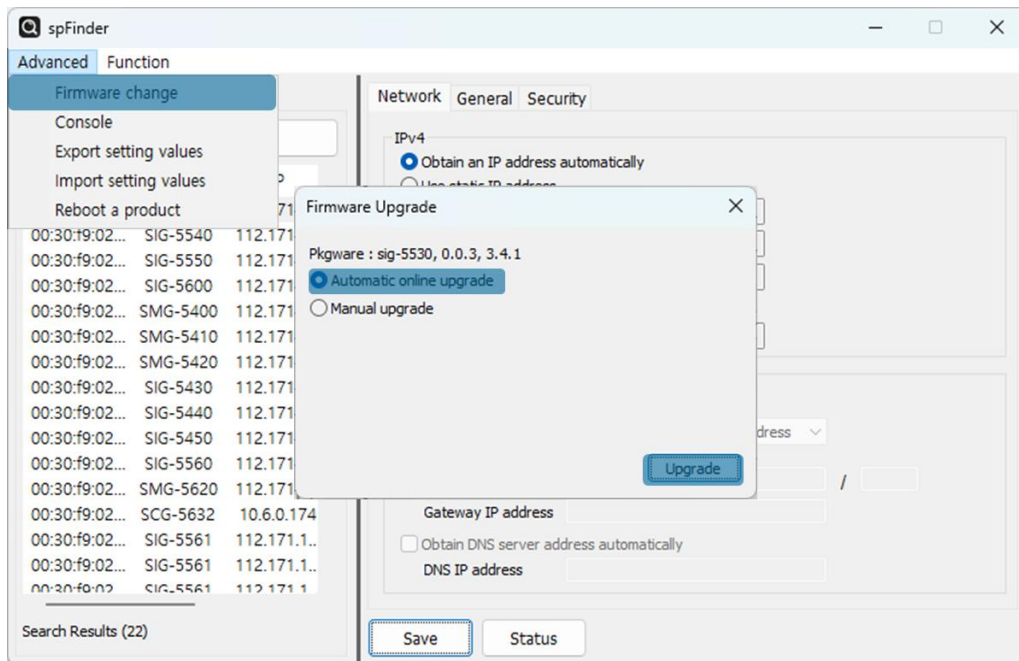


Figure 4-3 Online Upgrade

- Search and Connect to your product by spFinder.
- Click [Advanced] > [Firmware change] menu.
- Click [Upgrade] button selecting [Automatic online upgrade] menu.

4.2.2 Manual Upgrade

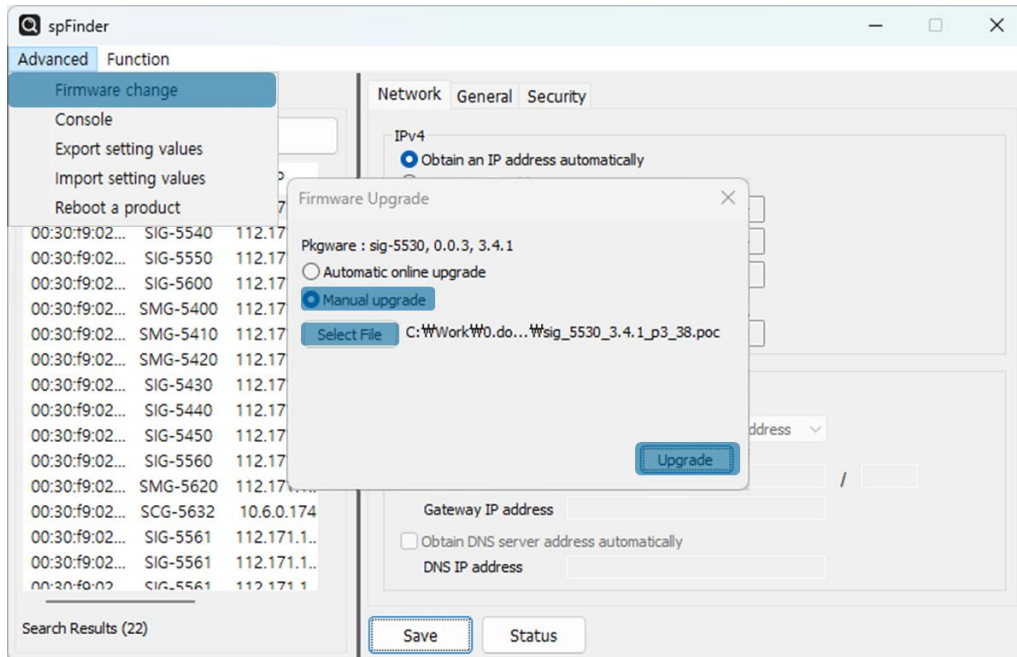


Figure 4-4 Manual Upgrade

- Download a Firmware file to your PC.
- Search and connect to your product by spFinder.
- Click [Advanced] > [Firmware Change] menu.
- Select to [Manual upgrade] on the [Firmware Upgrade] window.
- Click [Select File] button and select the Firmware file on your PC.
- Click [Upgrade] button.

4.3 Console

The console function analyzes and displays the Modbus frames sent and received by the product.

After searching and connecting the product with spFinder, click [Console] in the [Advanced] menu to display the console window. When you open this window, the spFinder connects to the product and keeps the connection until you close the window or time out. While the connection is maintained, other hosts cannot access the product using the spFinder.

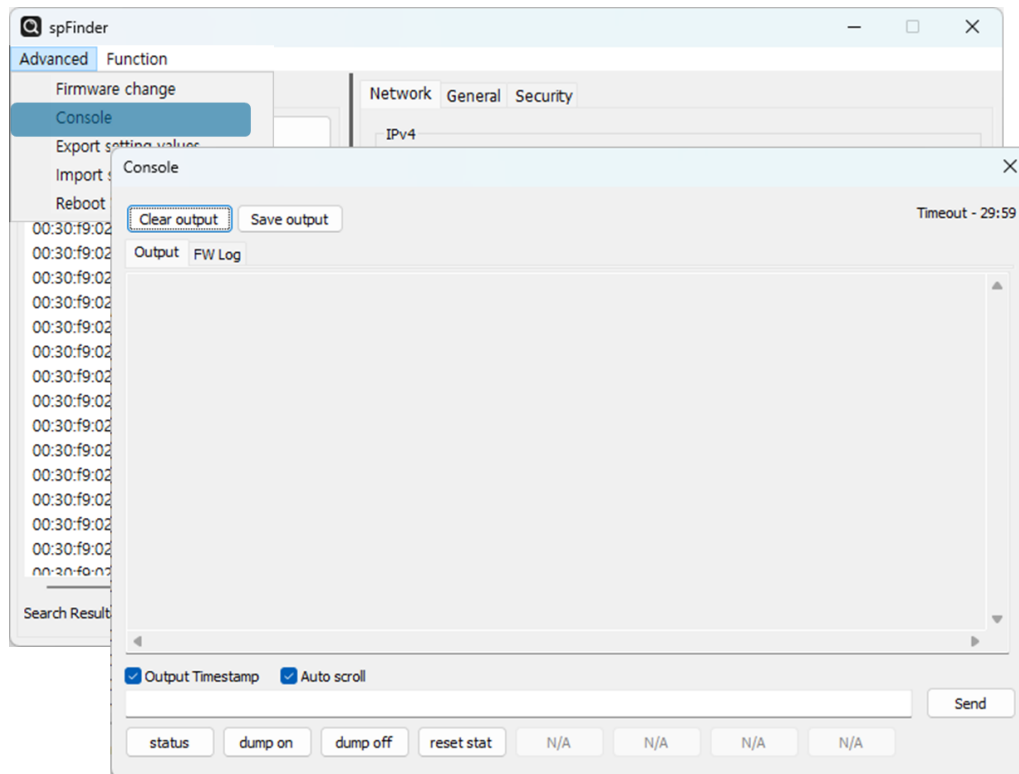


Figure 4-5 Console

4.3.1 Output Tab

This tab displays console messages.

- Clear output
Pressing this button clears all output messages on the Output tab.
- Save output
Press this button to save the message to be output to the Output tab as a file. While saving the message as a file, the size of the saved file is displayed, and the Timeout function does not work.
- status
Pressing this button outputs product status information on the Output tab.

- dump on
Pressing this button starts printing communication data out on the network to the Output tab.
- dump off
Pressing this button stops printing communication data out on the network to the Output tab.
- reset stat
Press this button to reset all the communication status information statistics of the product.

4.3.2 FW Log Tab

This tab displays a log message from Firmware.

4.3.3 Timeout

This is the timeout display function that appears in the upper right of the console window. When this time reaches zero, the connection between spFinder and the product is lost. The initial value is 30 minutes. If you move the mouse pointer in the internal area of the console window, the timer is reset to the initial value again. This function does not work while using the [Save output] function.

4.4 Export/Import Setting Values

The [Export setting values] menu saves all setting values of the product as a file except for the password. The [Import setting values] menu loads setting values from a file which is saved by the [Export setting values] menu. Note that you need to click the [Save] button to apply the setting to your product. Find these functions on the [Advanced] menu.

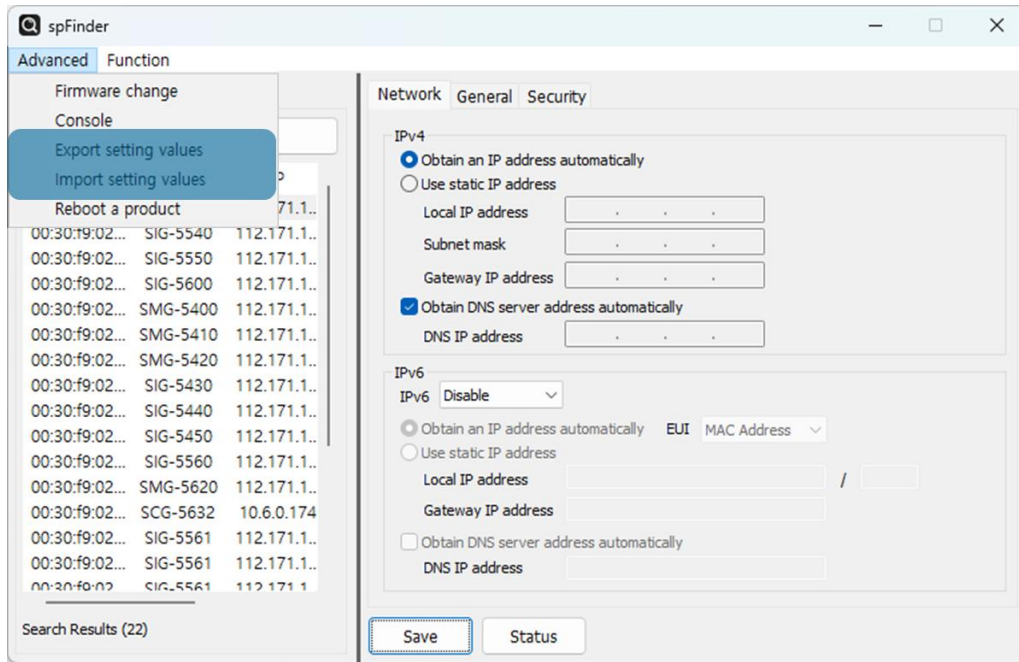


Figure 4-6 Export/Import Setting Values

4.5 Reboot a Product

This function is for rebooting products.

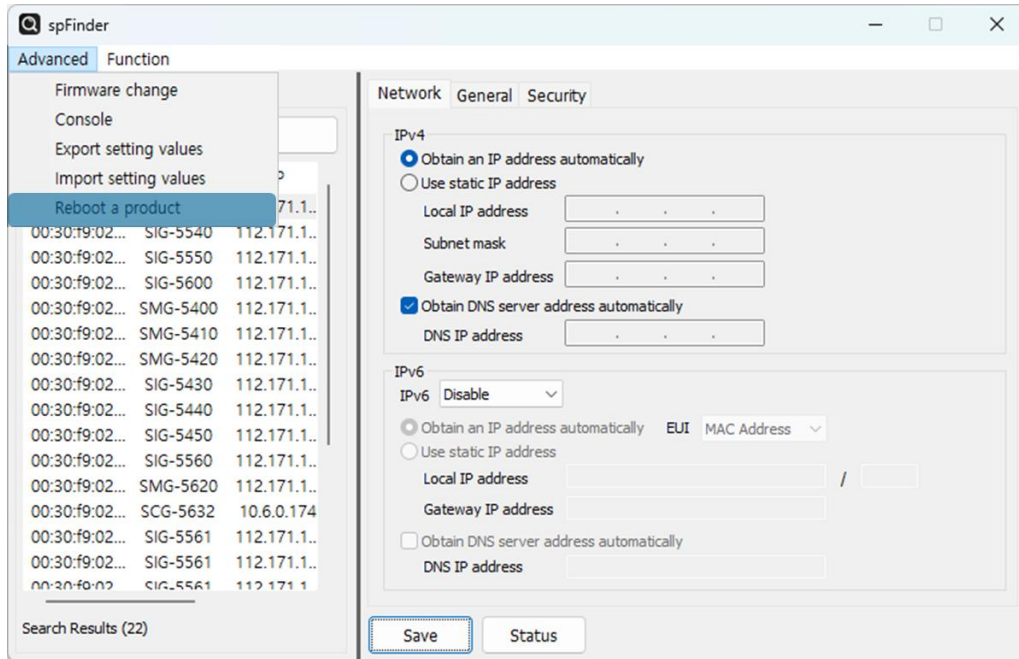


Figure 4-7 Reboot a Product

4.6 Factory Reset

Performing the Factory Reset, you can restore all the settings to the default including the password. Follow the procedure below by checking the status of RUN LED.

1. Press and immediately release the function button.



2. Press the function button and keep the state more than 5 seconds.



3. Once the RUN led is turned off, release the button within 2 seconds.



4. The factory reset is started when you release the button. After that, your product will reboot.



5 Register Map

5.1 Read Only

5.1.1 Analog Input Value Register

This register is for storing the most recently stored analog input value. The range of values is 0 to 65535.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	0	0x00	1	Integer	04	30001
Port 1	1	0x01	1	Integer	04	30002
Port 2	2	0x02	1	Integer	04	30003
Port 3	3	0x03	1	Integer	04	30004

Table 5-1 Analog Input Value Register

5.1.2 Minimum Analog Input Value Register

This register is for storing the minimum value among analog input values. The range of values is 0 to 65535.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	16	0x10	1	Integer	04	30017
Port 1	17	0x11	1	Integer	04	30018
Port 2	18	0x12	1	Integer	04	30019
Port 3	19	0x13	1	Integer	04	30020

Table 5-2 Minimum Analog Input Value Register

5.1.3 Maximum Analog Input Value Register

This register is for storing the maximum value among analog input values. The range of values is 0 to 65535.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	32	0x20	1	Integer	04	30033
Port 1	33	0x21	1	Integer	04	30034
Port 2	34	0x22	1	Integer	04	30035
Port 3	35	0x23	1	Integer	04	30036

Table 5-3 Maximum Analog Input Value Register

☞ *The minimum and maximum values of analog input can be initialized using the Reset Analog Input Min/Max Value Register.*

5.1.4 Analog Input Value Register (FP32)

This register stores the most recently saved analog input value in FP32 (32-bit Floating Point) format. The value range is determined by the analog input mode.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	48	0x30	2	FP32	04	30049
Port 1	50	0x32	2	FP32	04	30051
Port 2	52	0x34	2	FP32	04	30053
Port 3	54	0x36	2	FP32	04	30055

Table 5-4 Analog Input Value Register (FP32)

5.1.5 Minimum Analog Input Value Register (FP32)

This register stores the minimum analog input value in FP32 (32-bit Floating Point) format. The range of the value is determined by the analog input mode.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	64	0x40	2	FP32	04	30065
Port 1	66	0x42	2	FP32	04	30067
Port 2	68	0x44	2	FP32	04	30069
Port 3	70	0x46	2	FP32	04	30071

Table 5-5 Minimum Analog Input Value Register (FP32)

5.1.6 Maximum Analog Input Value Register (FP32)

This register stores the maximum analog input value in FP32(32-bit Floating Point) format. The range of the value is determined by the analog input mode.

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	80	0x50	2	FP32	04	30081
Port 1	82	0x52	2	FP32	04	30083
Port 2	84	0x54	2	FP32	04	30085
Port 3	86	0x56	2	FP32	04	30087

Table 5-6 Maximum Analog Input Value Register (FP32)

☞ *The minimum and maximum values (FP32) of analog input can be initialized using the Reset Analog Input Min/Max Value Register.*

5.1.7 1-bit ADC Value Register

This register stores the most recently measured 1-bit ADC value.

Division	Address		Bit Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	160	0xA0	1	Boolean	02	30161
Port 1	161	0xA1	1	Boolean	02	30162
Port 2	162	0xA2	1	Boolean	02	30163
Port 3	163	0xA3	1	Boolean	02	30164

Table 5-7 1-bit ADC Value Register

5.1.8 Device Information Register

Division	Address		Word Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Vendor Name	400	0x190	7	ASCII	03	40401
Product Code	407	0x197	4	ASCII	03	40408
Version	411	0x19B	5	ASCII	03	40412
Comment	416	0x1A0	16	ASCII	03	40417
Uptime	432	0x1B0	10	ASCII	03	40433
MAC Address	442	0x1BA	9	ASCII	03	40443
IP Address	451	0x1C3	8	ASCII	03	40452
1-bit ADC Mode	464	0x1D0	1	Boolean	03	40465
AI Mode	469	0x1D5	4	Integer	03	40470
AI Port Number	473	0x1D9	1	Integer	03	40474

Table 5-8 Device Information Register

☞ *All data read with function code 03 from the device information register has its byte order reversed for each word unit.*

- Vendor Name
- Product Code
- Version: This is the software version of the product
- Comment: This is a comment on the product. This value can be set via spFinder.
- Uptime: This is an uptime of the product. This value is recorded in the form of “day / hour:minute:second”.
- MAC Address
- IP Address
- 1-bit ADC Mode: This indicates the 1-bit ADC mode setting information. The value is 1 if the 1-bit ADC mode is enabled, and 0 if it is not. The least significant bit corresponds to input port 0.

- AI Mode: This indicates the analog input mode setting information. [0 ~ 5V] is set to 0, [4 ~ 20mA] is set to 1, and [0 ~ 20mA] is set to 2. The most significant byte corresponds to input port 0.
- AI Port Number: This indicates the information on the number of analog ports.

5.2 Read / Write

5.2.1 Reset Analog Input Min/Max Value Register

This register initializes the minimum and maximum values of analog input. When the value of the bit corresponding to each port is stored as 1, the minimum and maximum values of the port are initialized, and the bit is set to 0 again.

Division	Address		Bit Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
Port 0	160	0xA0	1	Boolean	01, 05 or 15	00161
Port 1	161	0xA1	1	Boolean	01, 05 or 15	00162
Port 2	162	0xA2	1	Boolean	01, 05 or 15	00163
Port 3	163	0xA3	1	Boolean	01, 05 or 15	00164

Table 5-9 Reset Analog Input Min/Max Value Register

5.2.2 Sending Basic Notification Enable Register

This register enables sending basic notification. The basic notification item is the 1-bit ADC values. When the bit corresponding to each session is set to 1, a notification is sent to that session whenever the basic notification item values change.

Division	Address		Bit Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
TCP 0	1200	0x4B0	1	Boolean	01, 05	01201
TCP 1	1201	0x4B1	1	Boolean	01, 05	01202
TCP 2	1202	0x4B2	1	Boolean	01, 05	01203
TCP 3	1203	0x4B3	1	Boolean	01, 05	01204

Table 5-10 Sending Basic Notification Enable Register

5.2.3 Sending Extended Notification Enable Register

This register enables sending extended notification. The extended notification items include analog input error codes, analog input min/max values, analog input (FP32) min/max values, and analog input min/max reset values. When the bit corresponding to each session is set to 1, a notification is sent to that session whenever any of the extended notification item values change.

Division	Address		Bit Count	Type	Function Code	HMI Addressing Example
	decimal	Hex.				
TCP 0	1040	0x410	1	Boolean	01, 05	01041
TCP 1	1041	0x411	1	Boolean	01, 05	01042
TCP 2	1042	0x412	1	Boolean	01, 05	01043
TCP 3	1043	0x413	1	Boolean	01, 05	01044

Table 5-11 Sending Extended Notification Enable Register

6 Technical Support and Warranty

6.1 Technical Support

If you have any question regarding operation of the product, visit Customer Support FAQ corner and the message board on Sollae Systems' web site or send us an email at the following address:

- E-mail: support@eztcp.com
- Q & A board: <https://www.eztcp.com/en/support/qna.php>

6.2 Warranty

6.2.1 Free Repair Services

For product failures occurring within 2 years after purchase, Sollae Systems provides free repair services or exchange the product. However, if the product failure is due to user's fault, repair service fees will be charged or the product will be replaced at user's expense.

6.2.2 Charged Repair Services

For product failures occurring after the warranty period (2 years) or resulting from user's fault, repair service fees will be charged and the product will be replaced at user's expense.

7 Precaution and Exemption from Liability

7.1 Precaution

- Sollae Systems is not responsible for product failures occurring due to user's alteration of the product.
- Specifications of the product are subject to change without prior notice for performance improvement.
- Sollae Systems does not guarantee successful operation of the product if the product was used under conditions deviating from the product specifications.
- Reverse engineering of firmware and applications provided by Sollae Systems is prohibited.
- Use of firmware and applications provided by Sollae Systems for purposes other than those for which they were designed is prohibited.
- Do not use the product in an extremely cold or hot place or in a place where vibration is severe.
- Do not use the product in an environment in which humidity is high or a lot of oil exists.
- Do not use the product where there is caustic or combustible gas.
- Sollae Systems does not guarantee normal operation of the product under the conditions a lot of noise exists.
- Do not use the product for a purpose that requires exceptional quality and reliability relating to user's injuries or accidents – aerospace, aviation, health care, nuclear power, transportation, and safety purposes.
- Sollae Systems is not responsible for any accident or damage occurring while using the product.

7.2 Exemption from Liability

7.2.1 English version

In no event shall Sollae Systems Co., Ltd. and its distributors be liable for any damages whatsoever (including, without limitation, damages for loss of profit, operating cost for commercial interruption, loss of information, or any other financial loss) from the use or inability to use the SIG-5530 even if Sollae Systems Co., Ltd. or its distributors have been informed of such damages.

The SIG-5530 is not designed and not authorized for use in military applications, in nuclear applications, in airport applications or for use in applications involving explosives, or in medical applications, or for use in security alarm, or for use in a fire alarm, or in applications involving elevators, or in embedded applications in vehicles such as but not limited to cars, planes, trucks, boats, aircraft, helicopters, etc.

In the same way, the SIG-5530 is not designed, or intended, or authorized to test, develop, or be built into applications where failure could create a dangerous situation that may result in financial losses, damage to property, personal injury, or the death of people or animals. If you use the SIG-5530 voluntarily or involuntarily for such unauthorized applications, you agree to subtract Sollae Systems Co., Ltd. and its distributors from all liability for any claim for compensation.

Sollae Systems Co., Ltd. and its distributors entire liability and your exclusive remedy shall be Sollae Systems Co., Ltd. and its distributors option for the return of the price paid for, or repair, or replacement of the SIG-5530.

Sollae Systems Co., Ltd. and its distributors disclaim all other warranties, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, with respect to the SIG-5530 including accompanying written material, hardware and firmware.

7.2.2 French version

- Documentation

La documentation du boîtier SIG-5530 est conçue avec la plus grande attention. Tous les efforts ont été mis en œuvre pour éviter les anomalies. Toutefois, nous ne pouvons garantir que cette documentation soit à 100% exempt de toute erreur. Les informations présentes dans cette documentation sont données à titre indicatif. Les caractéristiques techniques peuvent changer à tout moment sans aucun préavis dans le but d'améliorer la qualité et les possibilités des produits.

- Copyright et appellations commerciales

Toutes les marques, les procédés, les références et les appellations commerciales des produits cités dans la documentation appartiennent à leur propriétaire et Fabricant respectif.

- Conditions d'utilisations et limite de responsabilité

En aucun cas Sollae Systems Co., Ltd. ou un de ses distributeurs ne pourra être tenu responsable de dommages quels qu'ils soient (intégrant, mais sans limitation, les dommages pour perte de bénéfice commercial, interruption d'exploitation commerciale, perte d'informations et de données à caractère commercial ou de toute autre perte financière) provenant de l'utilisation ou de l'incapacité à pouvoir utiliser le boîtier SIG-5530, même si Sollae Systems Co., Ltd. ou un de ses distributeurs a été informé de la possibilité de tels dommages.

Le boîtier SIG-5530 est exclusivement prévu pour un usage en intérieur, dans un environnement sec et non poussiéreux. Le boîtier SIG-5530 n'est pas prévu, ni autorisé pour être utilisé en extérieur, ni de façon embarquée dans des engins mobiles de quelque nature que ce soit (voiture, camion, train, avion, etc...), ni en milieu explosif, ni dans des enceintes nucléaires, ni dans des ascenseurs, ni dans des aéroports, ni dans des enceintes hospitaliers, ni pour des applications à caractère médical, ni dans des dispositifs de détection et d'alerte anti-intrusion, ni dans des dispositifs de détection et d'alerte anti-incendie, ni dans des dispositifs d'alarme GTC, ni pour des applications militaires.

De même, le boîtier SIG-5530 n'est pas conçu, ni destiné, ni autorisé pour expérimenter, développer ou être intégré au sein d'applications dans lesquelles une défaillance de celui-ci pourrait créer une situation dangereuse pouvant entraîner des pertes financières, des dégâts matériel, des blessures corporelles ou la mort de personnes ou d'animaux. Si vous utilisez le boîtier SIG-5530 volontairement ou involontairement pour de telles applications non autorisées, vous vous engagez à soustraire Sollae Systems Co., Ltd. et ses distributeurs de toute responsabilité et de toute demande de dédommagement.

En cas de litige, l'entière responsabilité de Sollae Systems Co., Ltd. et de ses distributeurs vis-à-vis de votre recours durant la période de garantie se limitera exclusivement selon le choix de Sollae Systems Co., Ltd. et de ses distributeurs au remboursement de votre produit ou de sa réparation ou de son échange. Sollae Systems Co., Ltd. et ses distributeurs démentent toutes autres garanties, exprimées ou implicites.

Tous les boîtiers SIG-5530 sont testés avant expédition. Toute utilisation en dehors des spécifications et limites indiquées dans cette documentation ainsi que les court-circuit, les chocs, les utilisations non autorisées, pourront affecter la fiabilité, créer des dysfonctionnements et/ou la destruction du boîtier SIG-5530 sans que la responsabilité de Sollae Systems Co., Ltd. et de ses distributeurs ne puissent être mise en cause, ni que le boîtier SIG-5530 puisse être échangé au titre de la garantie.

- Rappel sur l'évacuation des équipements électroniques usagés

Le symbole de la poubelle barré présent sur le boîtier SIG-5530 indique que vous ne pouvez pas vous débarrasser de ce dernier de la même façon que vos déchets courants. Au contraire, vous êtes responsable de l'évacuation du boîtier SIG-5530 lorsqu'il arrive en fin de vie (ou qu'il est hors d'usage) et à cet effet, vous êtes tenu de le remettre à un point de collecte agréé pour le recyclage des équipements électriques et électroniques usagés. Le tri, l'évacuation et le recyclage séparés de vos équipements usagés permettent de préserver les ressources naturelles et de s'assurer que ces équipements sont recyclés dans le respect de la santé humaine et de l'environnement. Pour plus d'informations sur les lieux de collecte des équipements électroniques usagés, contacter votre mairie ou votre service local de traitement des déchets.

8 Revision History

Date	Version	Description	Author
31.10.2025.	1.0	1. Created	Roy Lee
14.01.2026.	1.1	1. Correct some errors	Roy Lee